



LG WashTower – Quick Wash Instructions (Golf Shop Cart Towels)

1. Prep

- Check drum is empty.
 - Shake towels outside (remove grass, sand, tees).
 - Load no more than ½ capacity (~6 kg).
-

2. Load

- Place towels loosely in drum.
 - Close door firmly.
-

3. Add Washing Powder

- Pull out detergent drawer (top left).
 - Use **Main Wash** compartment (large left section).
 - Add **1 full scoop** powder.
 - Push drawer back in.
-

4. Select Cycle

- Press **Power**.
 - Turn dial to **Quick Wash** (~30–40 mins).
 - Set spin speed to **1400**.
-

5. Start

- Press & hold **Start/Pause** for 3 sec.
 - Door will lock and cycle will start.
-

6. After Wash

- Wait for beep & “End” on display.
 - Remove towels promptly.
 - Shake to fluff before drying.
-

7. End Care

- Wipe door seal.
 - Leave door open to air-dry.
 - Rinse drawer if powder residue remains.
-

Notes:

- Towels only – no mixed loads.
- Remove heavy mud/grass first.
- Run **Tub Clean** weekly if washing daily.



LG WashTower – Dryer Instructions (Golf Shop Cart Towels)

1. Prep

- Check towels are freshly washed.
 - Clean lint filter (inside dryer door).
-

2. Load

- Place towels loosely in drum.
 - Close dryer door.
-

3. Select Cycle

- Press **Power**.
 - Set **Dry Mode** to **Turbo**.
-

4. Start

- Press & hold **Start/Pause** for 3 sec.
-

5. After Dry

- When cycle ends, remove towels immediately.
 - Shake to fluff before folding.
-

6. End Care

- Clean lint filter.
 - Leave door slightly open to air-dry.
-

Notes:

- Always clean lint filter before & after each load.
- Do not overload – towels need space to tumble.
- Run condenser clean every morning.
- Run drum clean every night.